


## **(A)** SEAT DEPTH ADJUSTMENT

Slide lever, push forward or backward to desired position, release to lock.

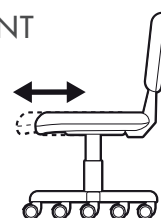


## **(B)** SEAT HEIGHT ADJUSTMENT

### **To lift:**

Remove body weight from seat, press lever upwards.

### **To lower:**

Sit on seat, press lever upwards.

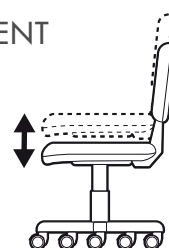


## **(C)** BACK ANGLE ADJUSTMENT

Twist handle clockwise to unlock.

Lean back to adjust backrest into desired position.

Twist handle anti-clockwise to lock.

Leave unlocked for a fully tilting back.

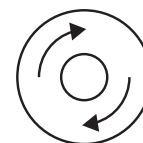


## **(D)** LUMBAR ADJUSTMENT

Slide plate up or down to desired position.



## ARMS

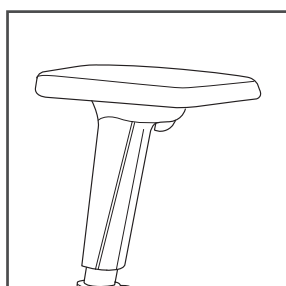

### A4D

4D Multi-function Arms

Push Button to Adjust Height

Move Pad to Adjust Width Depth & Angle

Adjustment:

